

## Rear Axle Bearing Remover Set 27129

**Tools for Professionals** 

## Rear Axle Bearing Remover Set

Used to pull semi floating rear axle bearings. 27129

- Carefully measure the diameter of the bearing to be pulled and match it with the correct size pulling attachment.
- 2. Using a slide hammer and attachment remove bearing from housing.

Caution: Always wear safety glasses



**MADE IN TAIWAN**